






IDC JACK INSTALLATION GUIDE

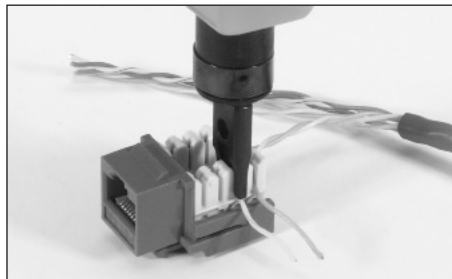

Place the insulated conductor pairs into the contacts and punch down using a 110 style tool.



TOP
VIEW

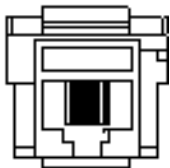


FRONT
VIEW

JACK PIN NUMBER


EIA 568A

EIA 568B

PIN 1	White/Green	White/Orange
PIN 2	Green	Orange
PIN 3	White/Orange	White/Green
PIN 6	Orange	Green
PIN 4	Blue	Blue
PIN 5	White/Blue	White/Blue
PIN 7	White/Brown	White/Brown
PIN 8	Brown	Brown

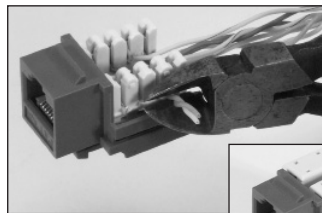

Trim off excess wire
(if your 110 tool does
not cut).

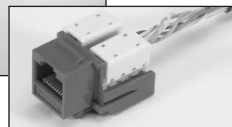

Snap the supplied retainer
cap over the conductor pairs
to complete the connector.