




an INFINITE® brand

Assembly Instructions for L-com Fixed Wall Mount 19" Cabinets 6, 9, and 15U

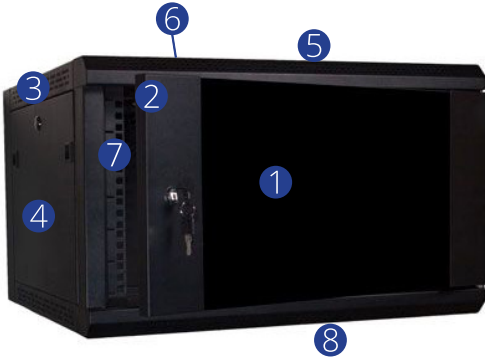

BOX INCLUDES:

- ① (1 pc) Locking Plexiglass Front Panel
- ② (1 pc) Front Frame
- ③ (2 pcs) Side Frame
- ④ (2 pcs) Locking Side Panel
- ⑤ (1 pc) Top Panel including Fan
- ⑥ (1 pc) Back Panel
- ⑦ (4 pcs) Cage-Nut Style Rack Rail
- ⑧ (1 pc) Bottom Panel
- ⑨ Assembly Hardware (Cage Nuts, Rack Screws, Washers and Keys)

TOOLS Required:

Phillips Head Screwdriver



STEP 1

Make sure to use the appropriate mounting hardware for your application. Due to the various types of walls that the cabinet may be installed on, mounting hardware is not included. Mount the Back Panel to the wall and proceed to Step 1.



Remove the Locking Side Panels from the Side Frames and set aside.

STEP 2



Remove Locking Plexiglass Front Panel and plastic spacer washer from the Front Frame and set aside.

STEP 3



Prepare Rack Screws for installation by inserting the Washers on to the Rack Screws.

STEP 4



Install (4) Cage Nuts in the corner holes of the Side Frame. Then install (2) Cage Nuts onto the front facing ports of the Side Frame. Repeat for second Side Frame.

STEP 5



Align the Rack Rails to the side panel so that the screw holes match up to the Cage Nuts. Tighten the Rack Screws into the Cage Nuts. Repeat for the second Side Frame and two remaining Rack Rails.



an INFINIT® brand

STEP 6



Install (2) Cage Nuts on each side of the Back Panel.

STEP 7



Line up the Side Frame with the Cage Nuts on the Back Panel and install Rack Screws securing the Side Frame in place. Repeat this step for the other Side Frame.

STEP 8



Install the Top Panel by sliding the rear tab underneath the lip of the Back Panel and resting on top of the Side Panels.

STEP 9



Install the Bottom Panel by sliding the rear tab over the lip of the Back Panel and have someone assist by holding the Bottom Panel in place while completing Step 10.

STEP 10



Install the Front Panel by ensuring that it fits over the tab of the Top Panel and under the tab of the Bottom Panel, snapping into place securely. Tighten Rack Screws in to the front facing Cage Nuts installed on each Side Frame in Step 4.

STEP 11



Re-attach the Locking Plexiglass Front Panel. Make sure to slide the plastic spacer back on and squeeze the hinge lock to get it into position. Finish by locking the door.

STEP 12



Slide the Locking Side Panels in to place and finish by locking them.



Congratulations, you have successfully installed the L-com Fixed Wall Mount 19" Cabinet.